

# Western Star Truck Information



**WESTERN STAR**







HORN WIRE located behind  
instrument cluster







24A 2107  
HORN WIRE  
located behind  
driver side  
instrument cluster  
going to a 1 pin  
QC connector

A "Y" Connector can be plugged into one of these Deutsch plugs to make it easy to connect and disconnect back to original wiring

CANBUS  
Plugs

EARTH

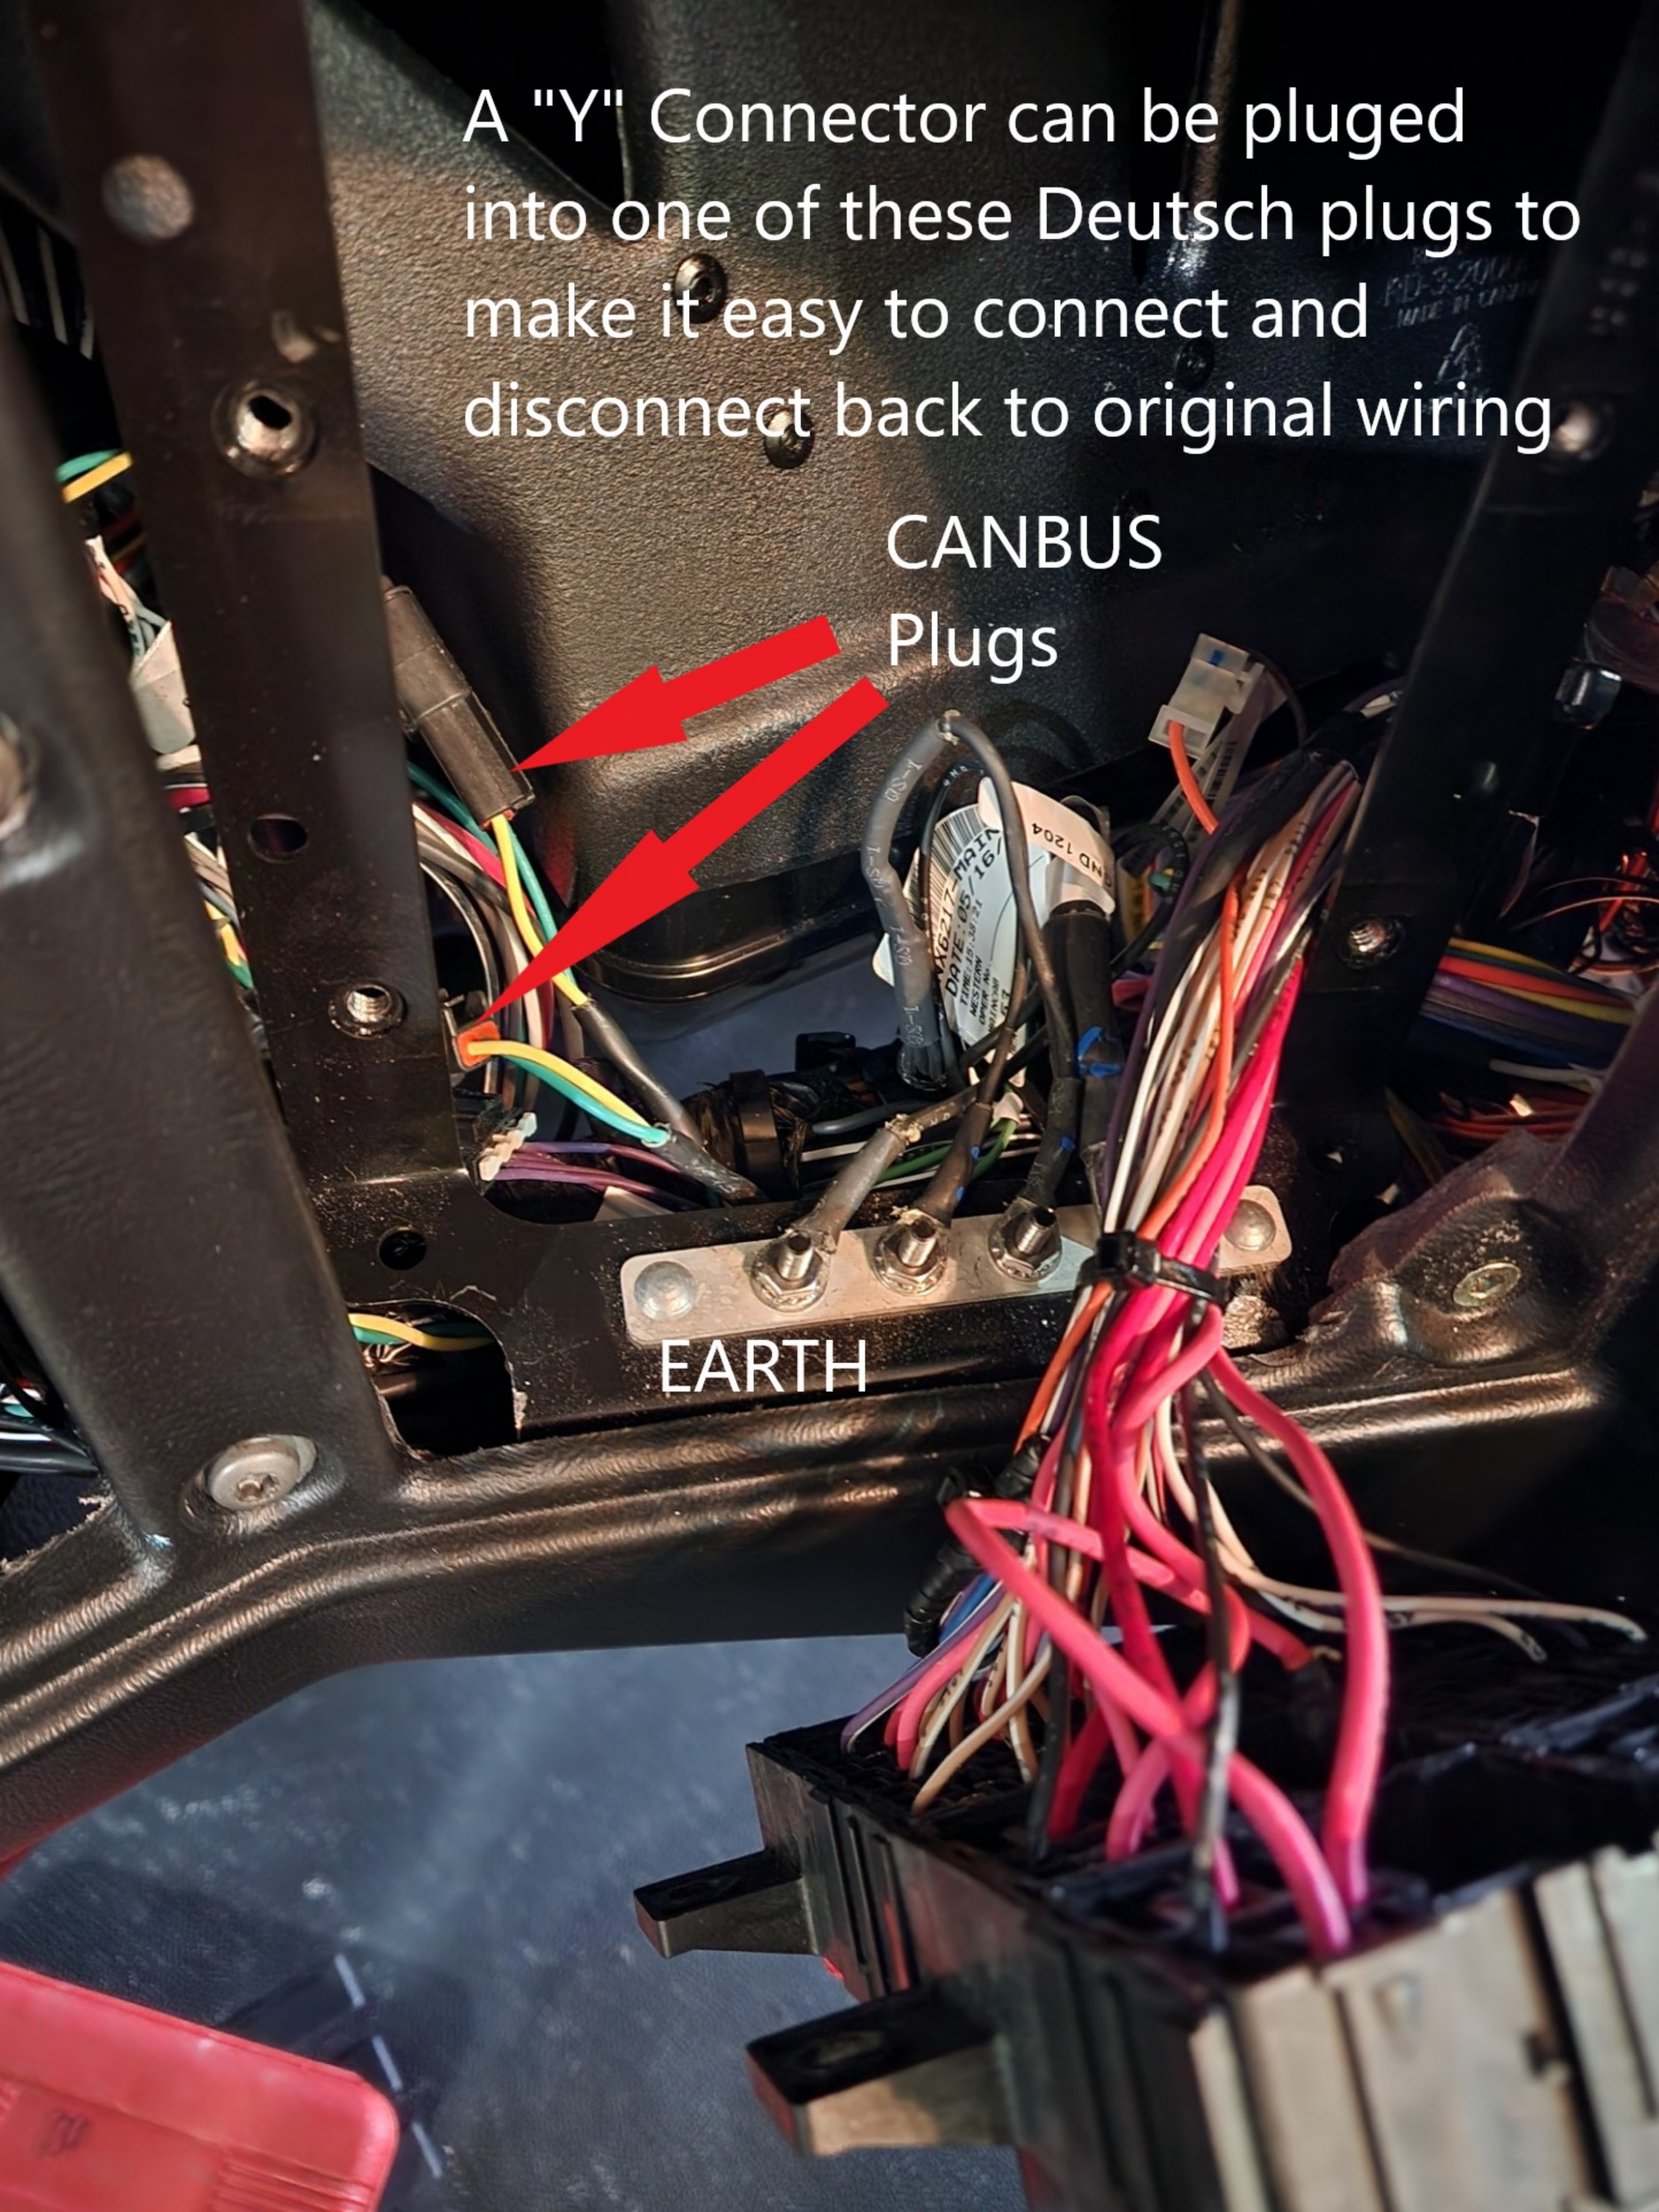

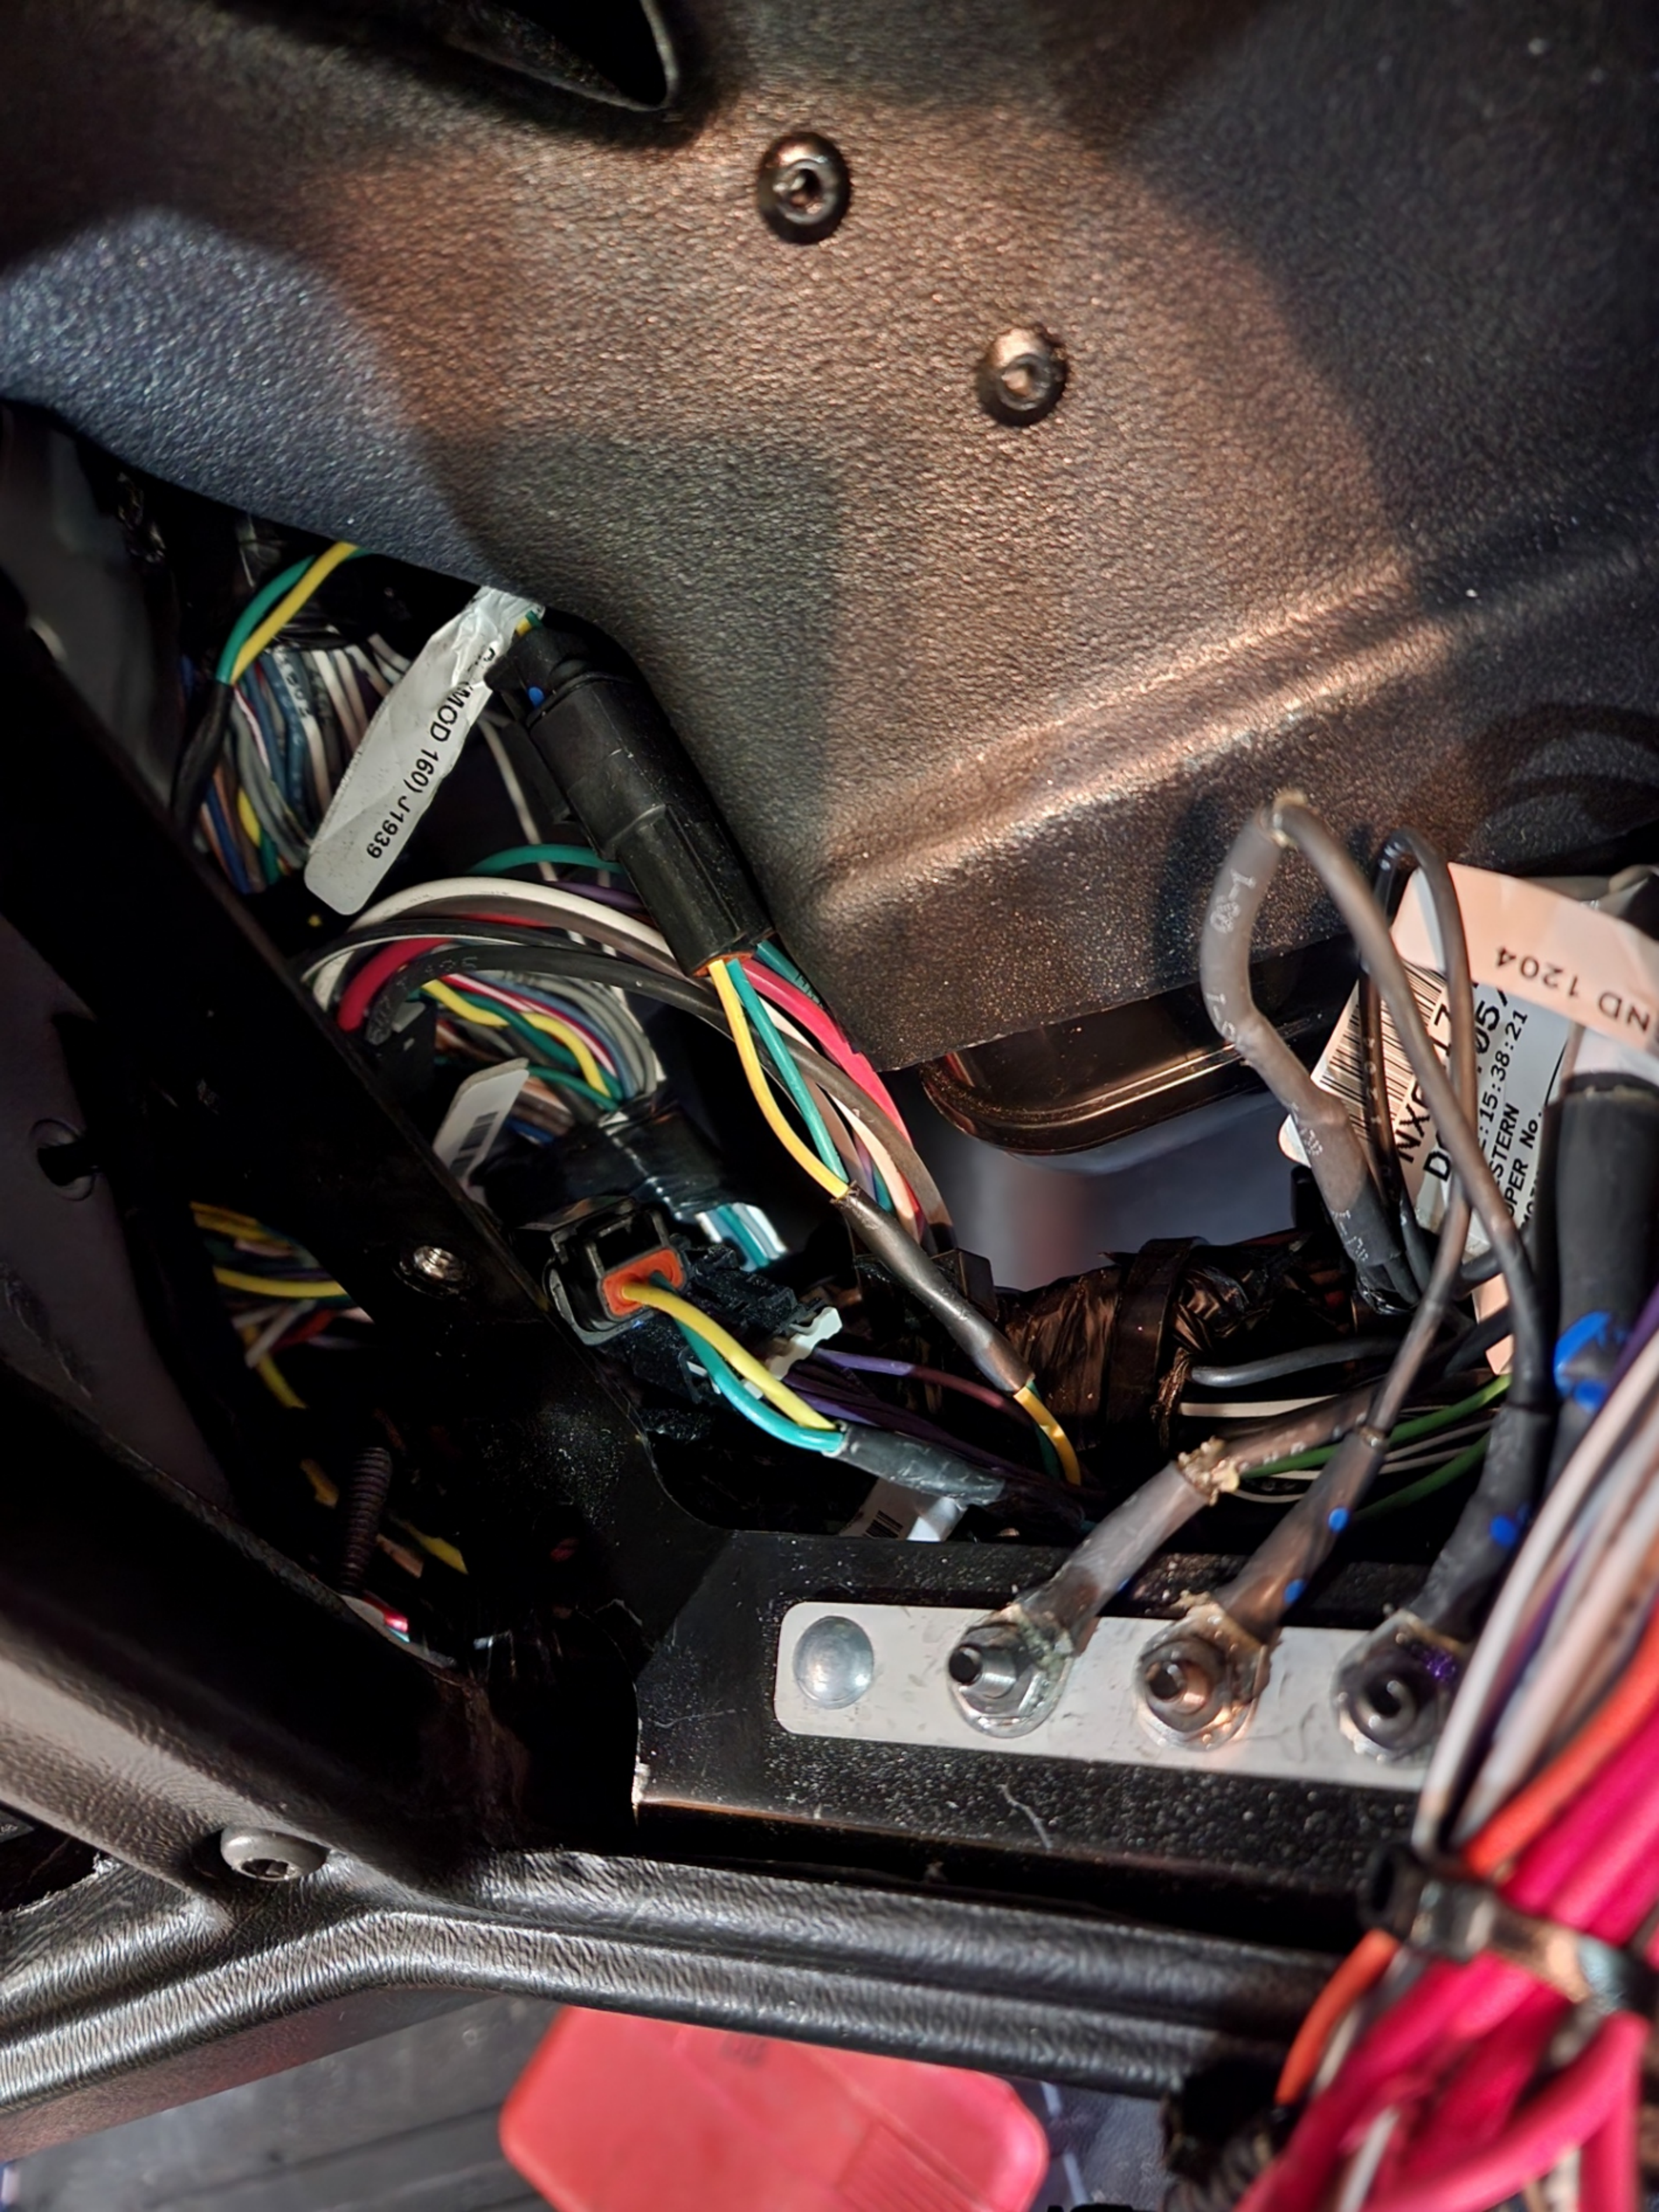

MOD 160, J1939

ND 1204

INX 17  
15:38:21  
STERN  
OPER No.

**WARNING**  
Face cab when climbing  
up and down.  
Use handholds.  
Keep these limbs in  
contact with truck.  
Do not carry anything.  
Follow instructions in  
driver's manual.

